


NOTES:

1. BE AWARE THAT THE BRANCH WIRE IS NOT CONNECTED TO THE MAIN WIRE.
2. LOCATE WIRE SHALL ENTER THE VALVE BOX THROUGH A 3/4"Ø (MIN) HOLE OR SHALL BE ROUTED THROUGH THE JOINTS OF THE VALVE BOX ADJUSTMENT SECTION.
3. SEE ADDITIONAL NOTES AND REQUIREMENTS ON DETAIL SS-56.

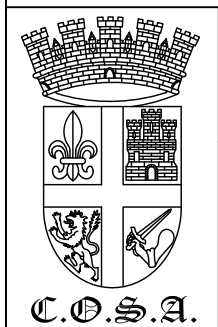

LOCATE WIRE FOR BRANCH
FORCE MAIN

REVISION
DATE:

FEB 2017

NOT TO
SCALE

SS-57