



BOLT LOCATING WIRE TO VALVE BOX & PIG TAIL END (12" LONG)

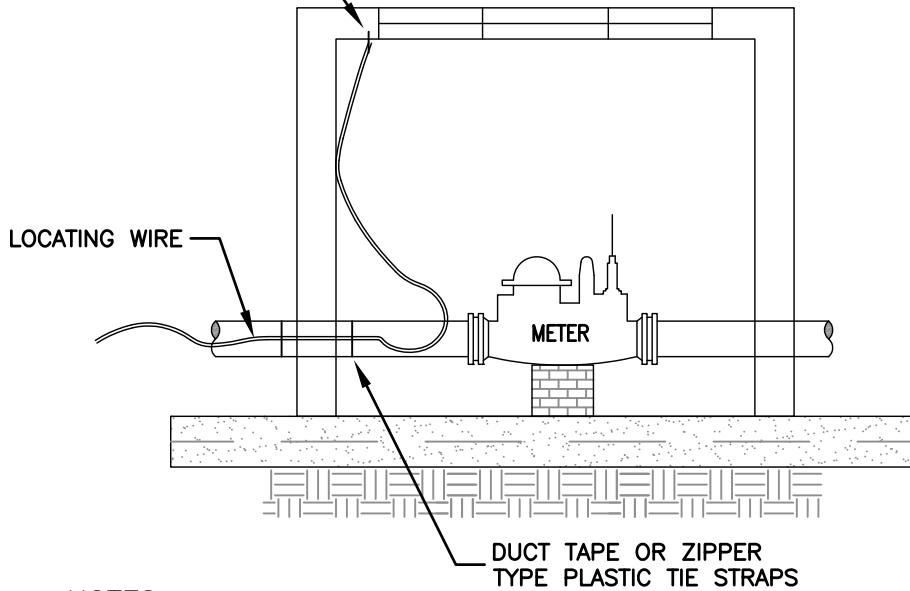

**NOTES:**

1. BE AWARE THAT THE BRANCH WIRE IS NOT CONNECTED TO THE MAIN WIRE.
2. LOCATE WIRE SHALL ENTER THE VALVE BOX THROUGH A 3/4"Ø (MIN) HOLE OR SHALL BE ROUTED THROUGH THE JOINTS OF THE VALVE BOX ADJUSTMENT SECTION.
3. SEE ADDITIONAL NOTES AND REQUIREMENTS ON DETAIL W-56.

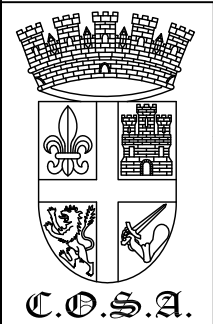

**LOCATE WIRE FOR BRANCH WATER MAINS AND LARGE SERVICES**

REVISION DATE:

FEB 2017

NOT TO SCALE

W-57