



TEMPORARY SAMPLE TAP UTILIZING A NEW 1" WATER SERVICE

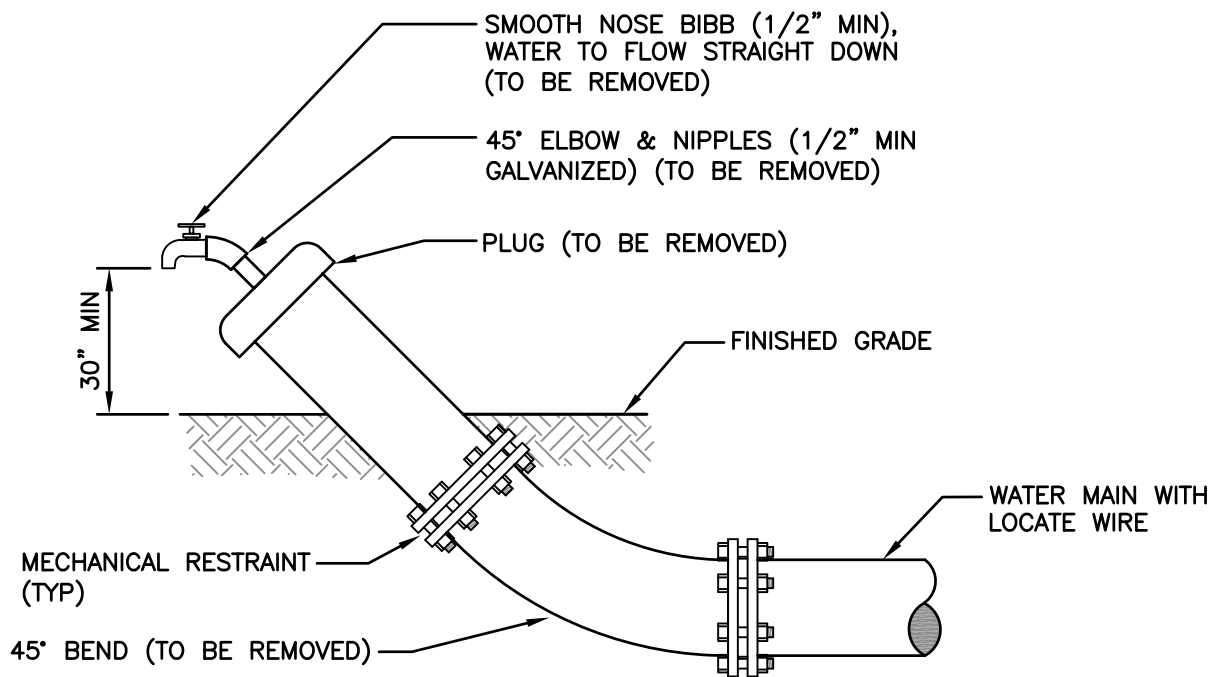

TEMPORARY SAMPLE TAP UTILIZING PLUG AT FLUSHING LOCATION

**NOTES:**

1. LOCATION OF SAMPLE POINT BIBB SHALL NOT BE WITHIN THE ROADWAY BUT ROUTED TO THE ROAD SHOULDERS.
2. THE CONTRACTOR SHALL BE RESPONSIBLE FOR THE REMOVAL OF ALL TEMPORARY PIPING & FITTINGS (AS NOTED) AFTER BACTERIOLOGICAL CLEARANCE IS RECEIVED.
3. THE CONTRACTOR SHALL UTILIZE THE ABOVE ALTERNATIVE METHODS FOR CONSTRUCTION OF TEMPORARY SAMPLE POINTS IN ALL AREAS, WHERE POSSIBLE.
4. THE CONTRACTOR SHALL COMPLY WITH ALL C.O.S.A. RULES AND POLICIES AS OUTLINED BY C.O.S.A'S INSPECTOR OR C.O.S.A'S ENGINEER AND OTHER ASSOCIATED C.O.S.A. STANDARDS.

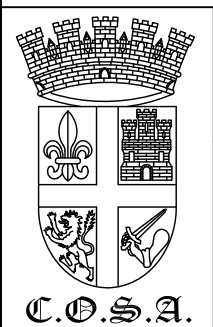

**TEMPORARY SAMPLE TAP  
ALTERNATIVE METHODS**

REVISION  
DATE:

FEB 2017

NOT TO  
SCALE

W-27